


# 4.4

## Alignment Laser Replacement XRF2 Dual Air Fusion

Page 1 of 3  
2016-12-23

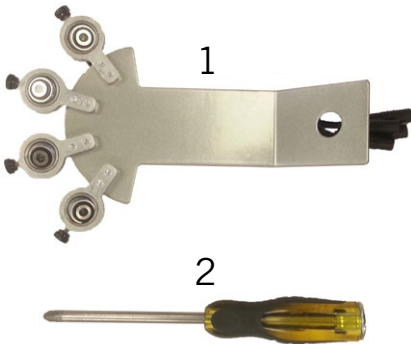

Included Parts:

1. Laser Alignment System

Required Tools:


2. #3 Phillips Screwdriver




CAUTION: Detach power cord before proceeding




Unplug old Laser Alignment System from base leg cap

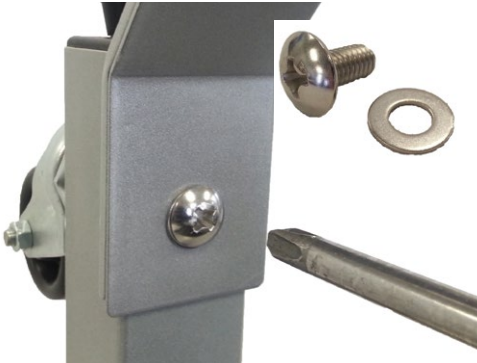

Remove old Laser Alignment System by unscrewing 3/8"-16 x 1/2" Screw and Washer using #3 Phillips Screwdriver

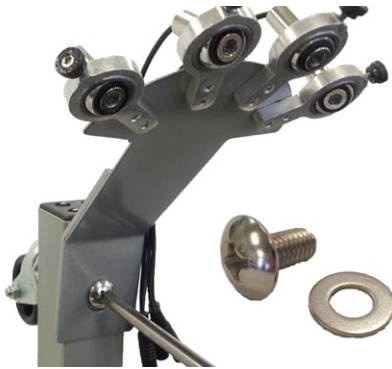


Install new Laser Alignment System and tighten 3/8"-16 x 1/2" Screw and Washer using #3 Phillips Screwdriver

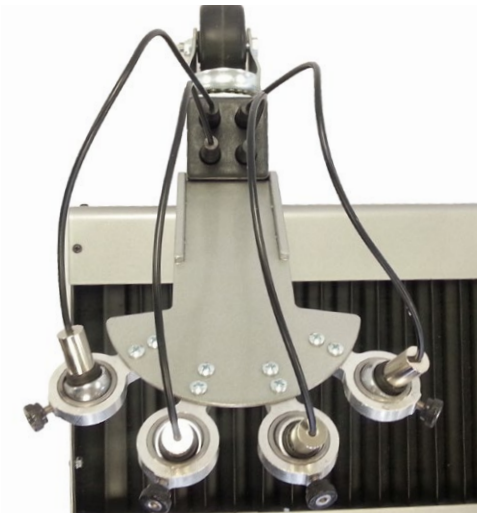

Plug laser cords into base in the following arrangement, as viewed from above:

1. Top Left
2. Bottom Left
3. Bottom Right
4. Top Right

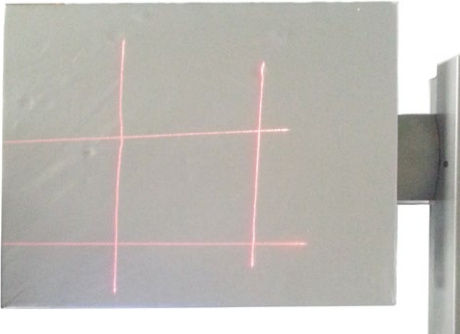

Plug in press and turn on to check for proper functionality of new Laser Alignment System. If system does not function normally, wiring inside the base may be damaged.



If some base plugs are not functional, several laser cords may be spliced together to share a single functional plug.