

## HOUSING REMOVAL ON STX/MAXX HEAT PRESS

- Remove the housing from the machine by removing **4** screws on the press as seen in the photos below. This will expose the wiring inside the housing.



CAUTION: Detach power cord before proceeding



Remove 4x #6 x 1/2" Screws from control housing using #2 Phillips Screwdriver

- The screws to remove are shown in green. There will be 2 in the same area on the opposite side. Do NOT remove the screws on the front of the housing or on the arm - shown with red X icons.

