

Required Tools:

- 1. Paper Clip
- 2. USB Mini-B to USB 2.0 A cable
- 3. Windows Computer. MAC is not compatible.

Required Software:

- 1. MFDeploy
- 2. Flash Software V15

These are links to download them as ZIP files.




CAUTION: Detach power cord before proceeding



Remove the Touch Screen Controller

Insert the Paper Clip into the small hole on either side of the housing.

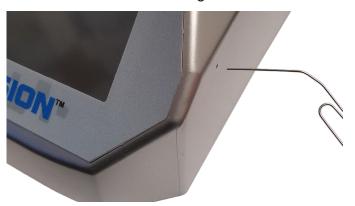

Press in paper clip until two clicks are heard: The first click releases the controller bezel and the second click ejects it from the housing as shown.




Repeat the process on the other side of the housing



Remove Touch Screen Controller



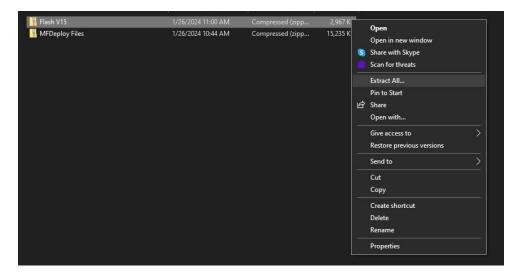



Moving to your computer, extract files from download links above. They will not function as a ZIP file.



Locate the mini-usb port on the back of the faceboard and connect it with your computer.




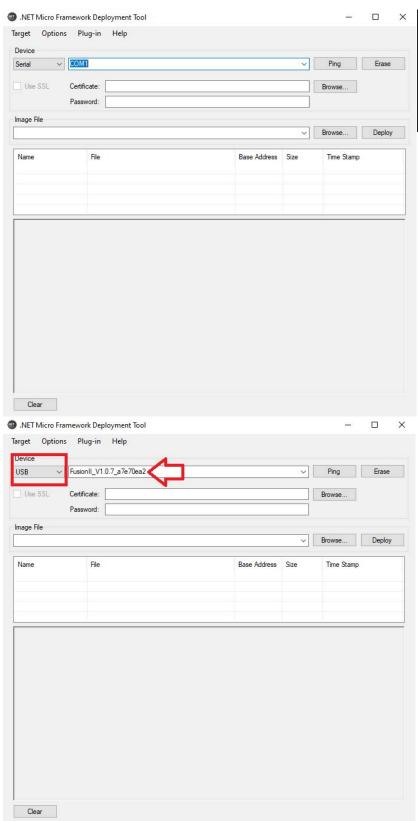

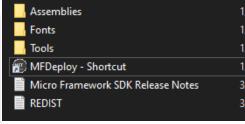

Locate where you extracted the zipped folders, open MFDeploy Files and then run MFDeploy - Shortcut. Once open, it will display this window.

Click the drop-down arrow in the device section and select USB. Your device should now be detected by the tool.

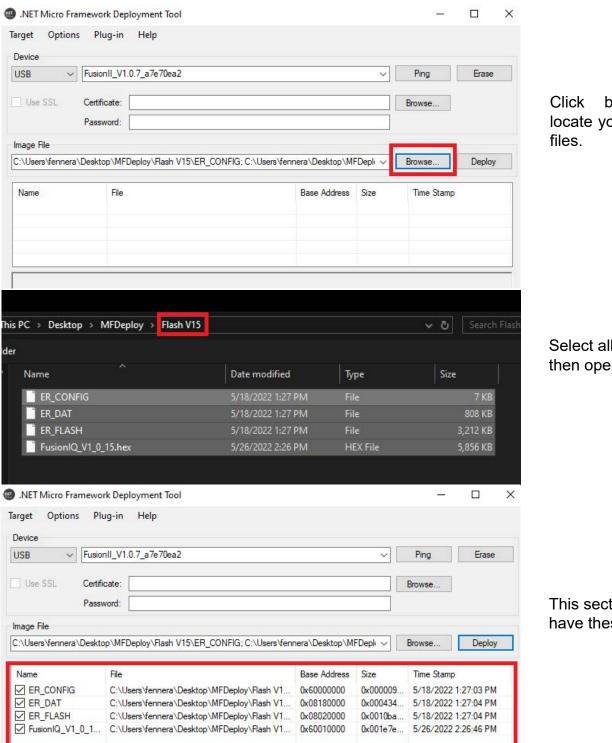


Click browse and then locate your Flash V15 folder files

Select all of these files and then open them.

This section should now have these files active.



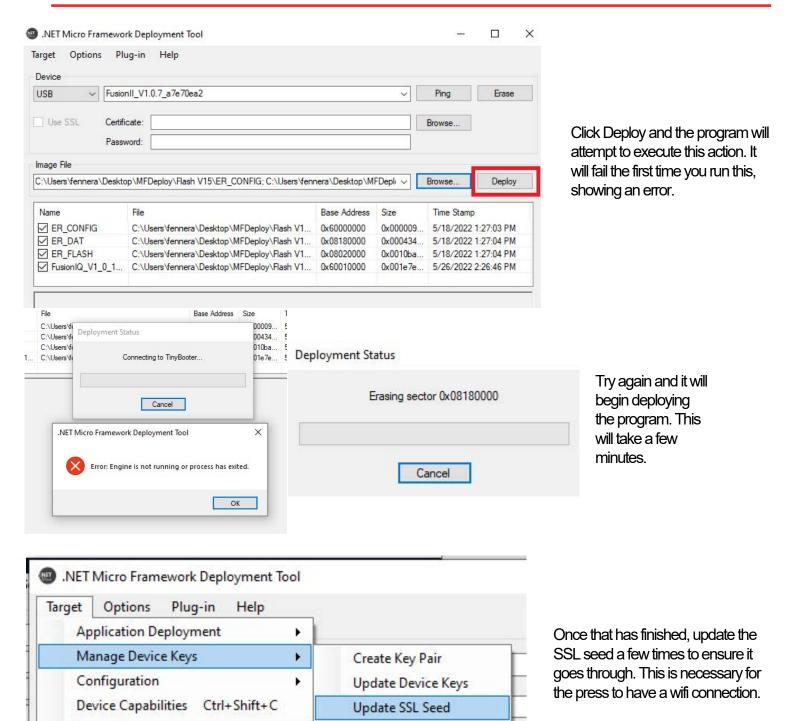

Return face board to the press and test to confirm functionality.



F5

Ctrl+F5

Connect

Disconnect