



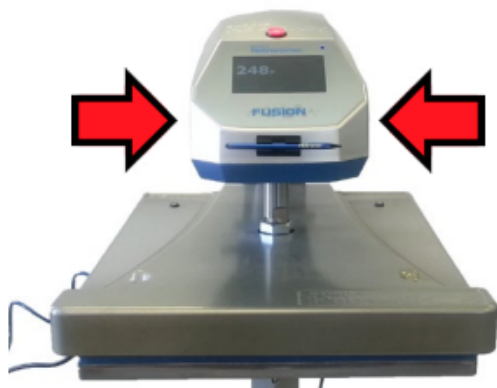


Press Print Switches to lower heater

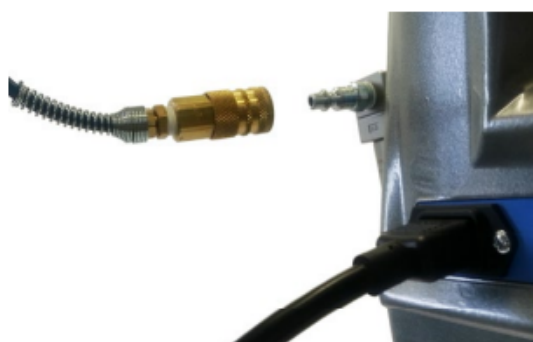

While heater is lowered,
disconnect air supply line from air
filter

Remove the Touch Screen Controller

1. Insert the Paper Clip into the small hole on either side of the housing.

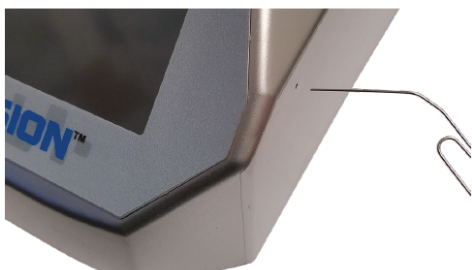

3. Repeat the process on the other side of the housing



2. Press in the paper clip until two clicks are heard: The first click releases the controller bezel and the second click ejects it from the housing as shown.



4. Remove the controller



Remove the 4 screws from the outside corners of the control board.



CAUTION: Detach power cord
before proceeding



Remove three #8-32 x 3/4"
Screws from Control Housing using
Short #2 Phillips Screwdriver



Lift off Control Housing and lay it
gently on left side of press